



## Valve Change for NT-5C or NT-10C Pump

**043-0100**


Exhaust Valve High/Low Pressure (2)

**043-0098**

Intake Valve Low Pressure (2)

**043-0099**

Intake Valve High Pressure (1)

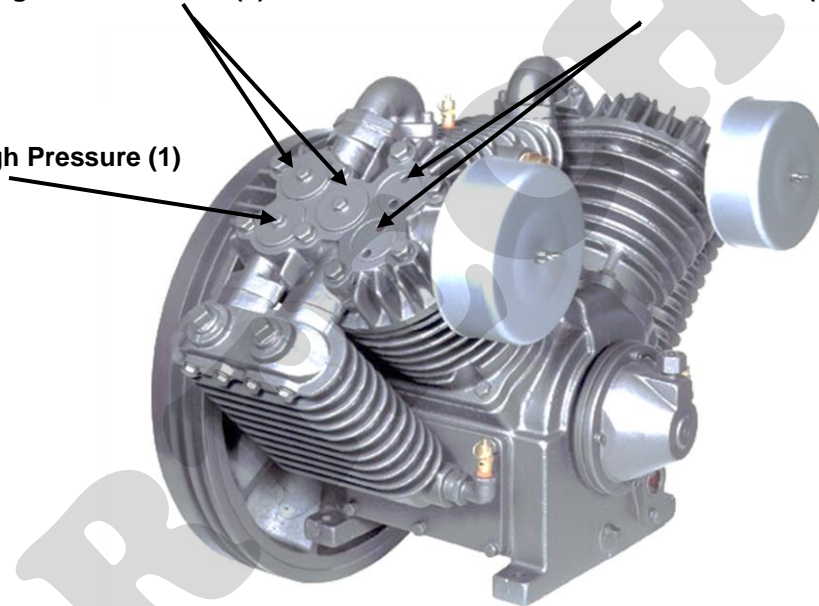

Note that although the valves look alike, there is a difference. Do not mix them up.

Remove valve cover. The valve keeper will be exposed.

This can be removed by inserting a round punch in each hole and twisting counter clockwise with a wrench.

Remove the old valve assembly, noting the order of parts.

Replace with new valve assembly.

Re-install the valve keeper and valve cover.

Notez que même si les valves ressemblent, il y a une différence. Ne les mélangez pas.

Enlever la couverture de valves. Le garde de valve sera exposé. Ceci peut être enlevé en insérant un punch rond en chaque trou et en tordant contre dans le sens des aiguilles d'une montre avec une clé.

Enlevez les vieilles valves, notant l'ordre des pièces.

Remplacez avec les nouvelles valves.

Réinstallez la valve et la couverture de valve.

### **TORQUE SPECIFICATIONS:**

BEARING CARRIER	14 ft. lbs	FLYWHEEL	47 ft. lbs
UNLOADER COVER	9 ft. lbs	SIGHT GLASS	14 ft. lbs
AFTERCOOLER	14ft. lbs	CYLINDER	19 ft. lbs
INTERCOOLER	14 ft. lbs	ROD	34 ft. lbs
VALVE RETAINERS	51 ft. lbs	HEAD	32 ft. lbs
VALVE COVER	14 ft. lbs	SIDE COVER	14 ft. lbs



Valve change tool available